Numark Turntable Guide

Step-by-Step Instructions

Step 1: Look on the right side of the turntable. There should be an on/off switch. Turn the turntable to “On.”

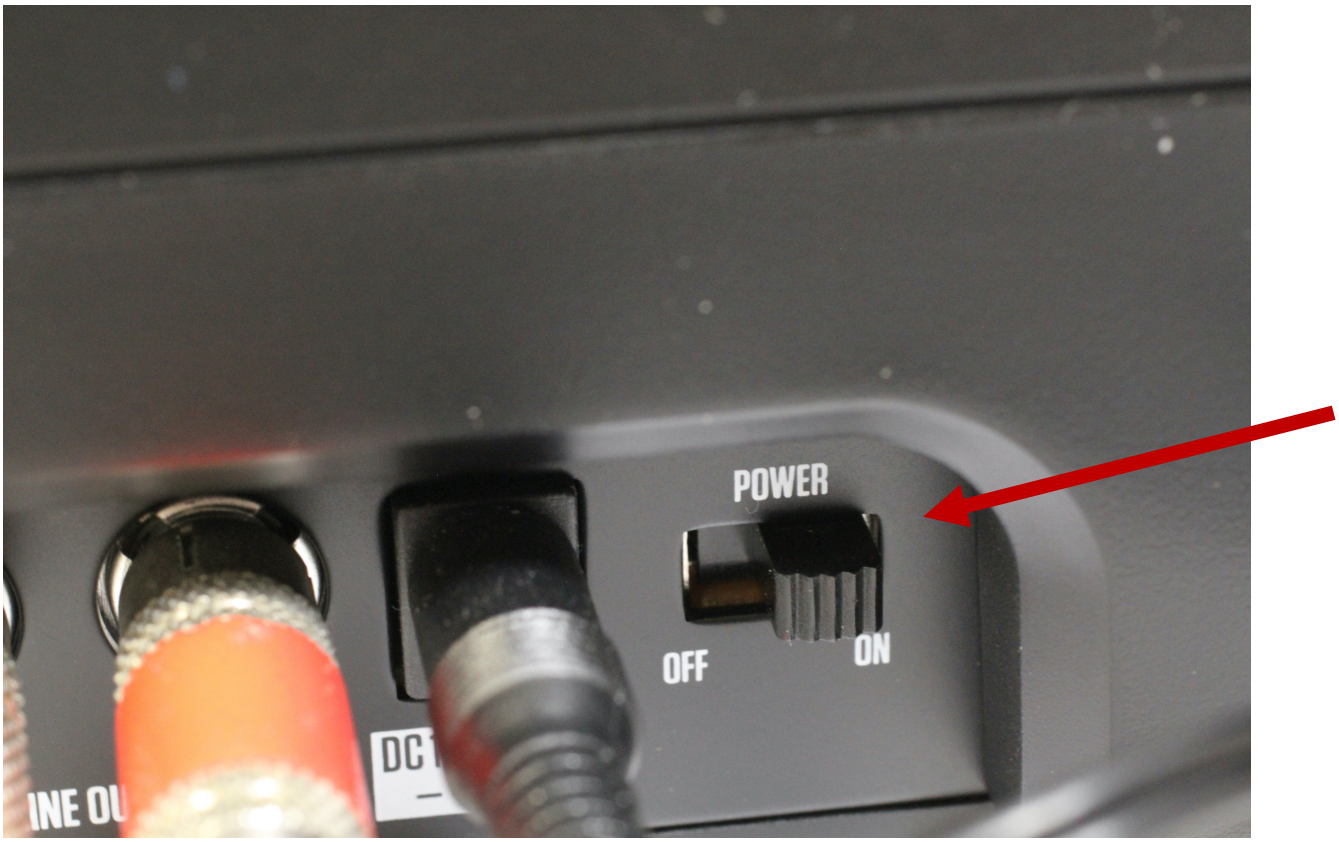

Step 2: Remove red covering from the top of the turntable. This is what you will place your disc on.

Step 3: Pick a disc and place it on the turntable as such.

Step 4: Take the tonearm off of the clip and gently place it onto the top of the disc.

Step 5: Adjust your volume levels. You first want to make sure that you can hear your sound. This toggle allows you to mute or unmute your sound.

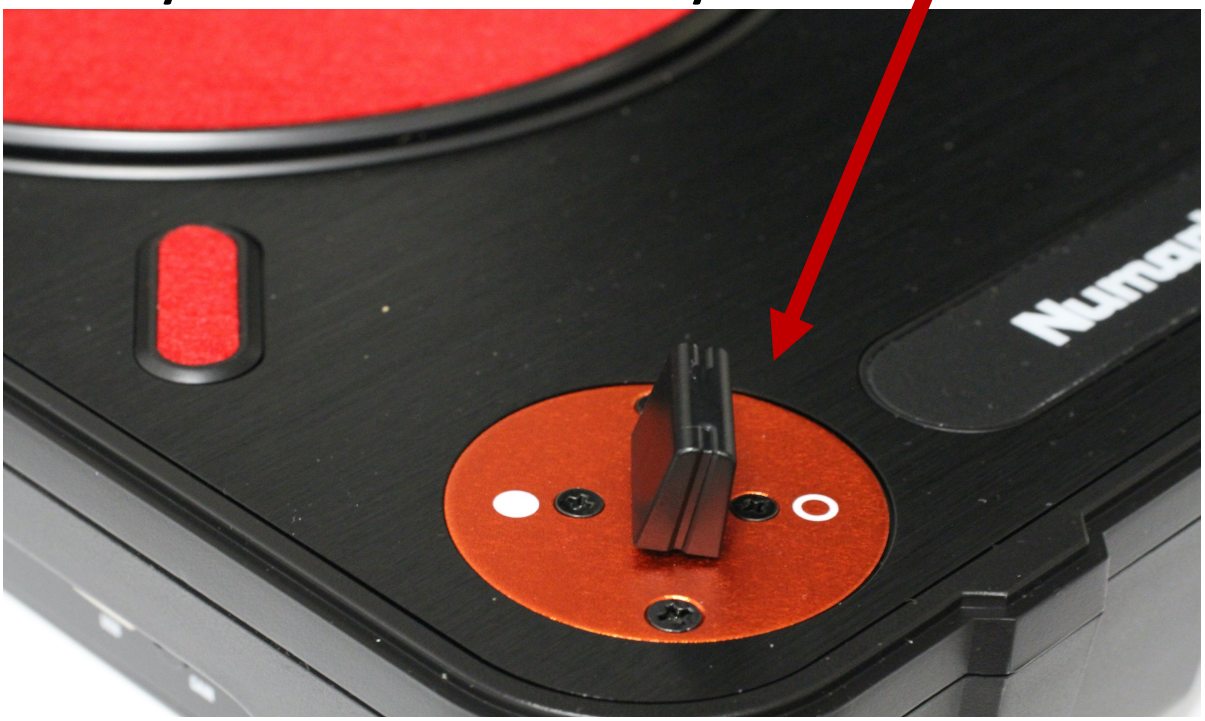

**These knobs adjust the volume of your sound,
the pitch of your sound, and the tone of your sound.**

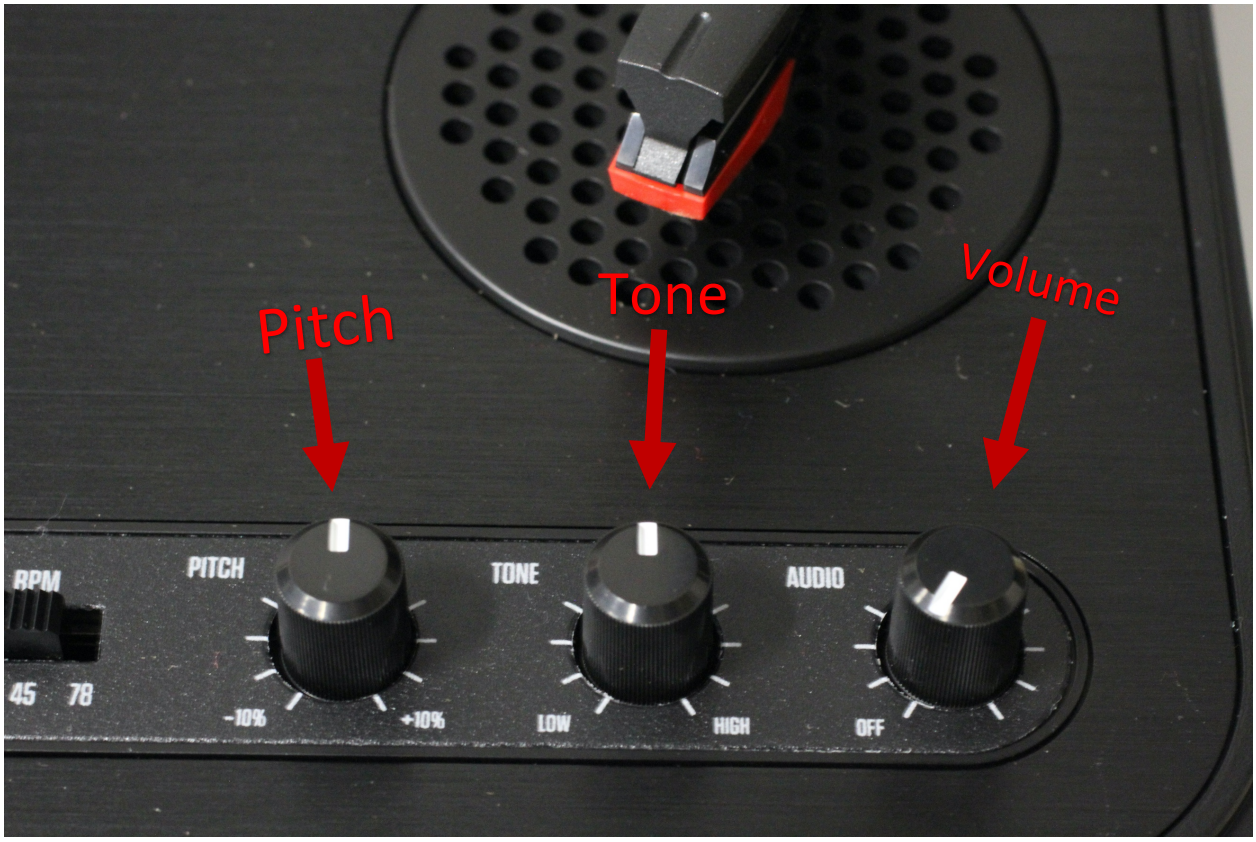

****It'll probably be best just to play around with the levels until you understand how each one works.****

Step 6: If you plan on using Logic Pro X to record your sound from the turntable, choose the microphone input line and make sure it's set to Audio Input 3&4. Hit create.

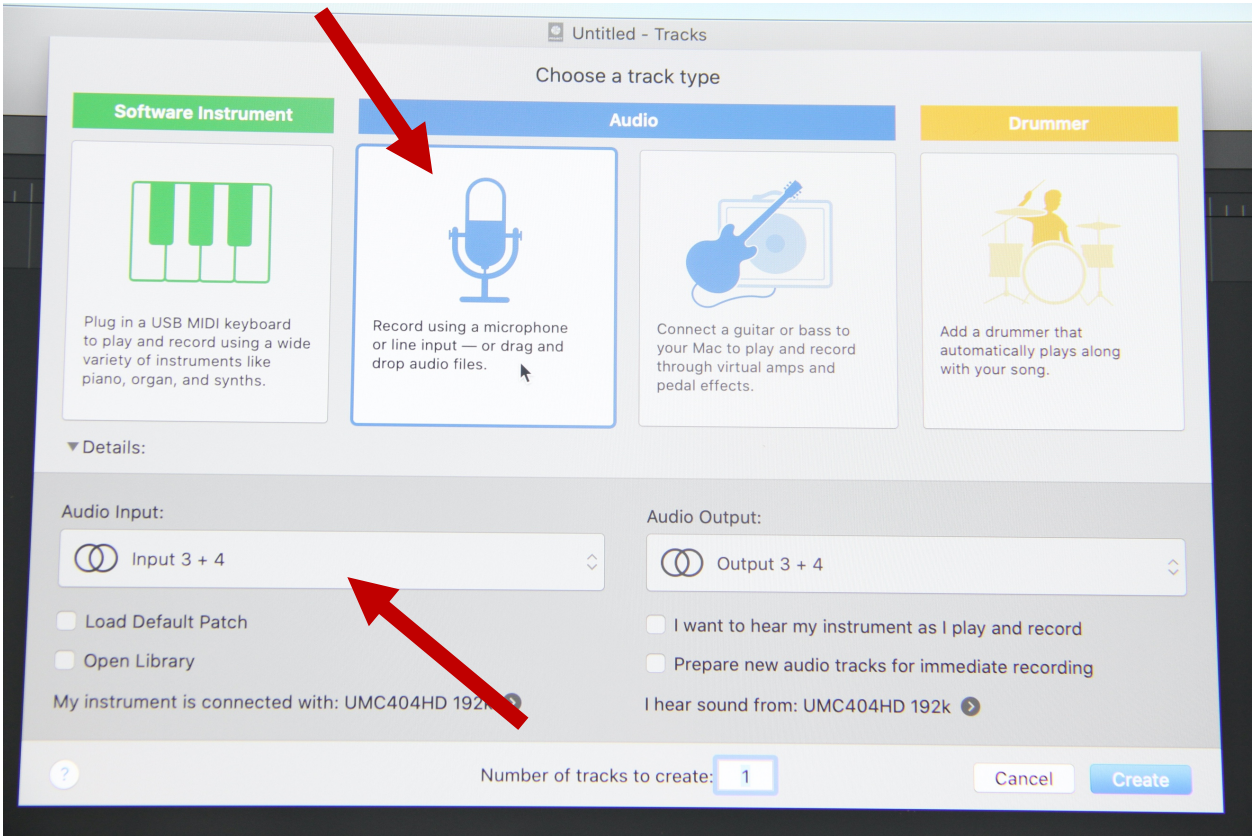
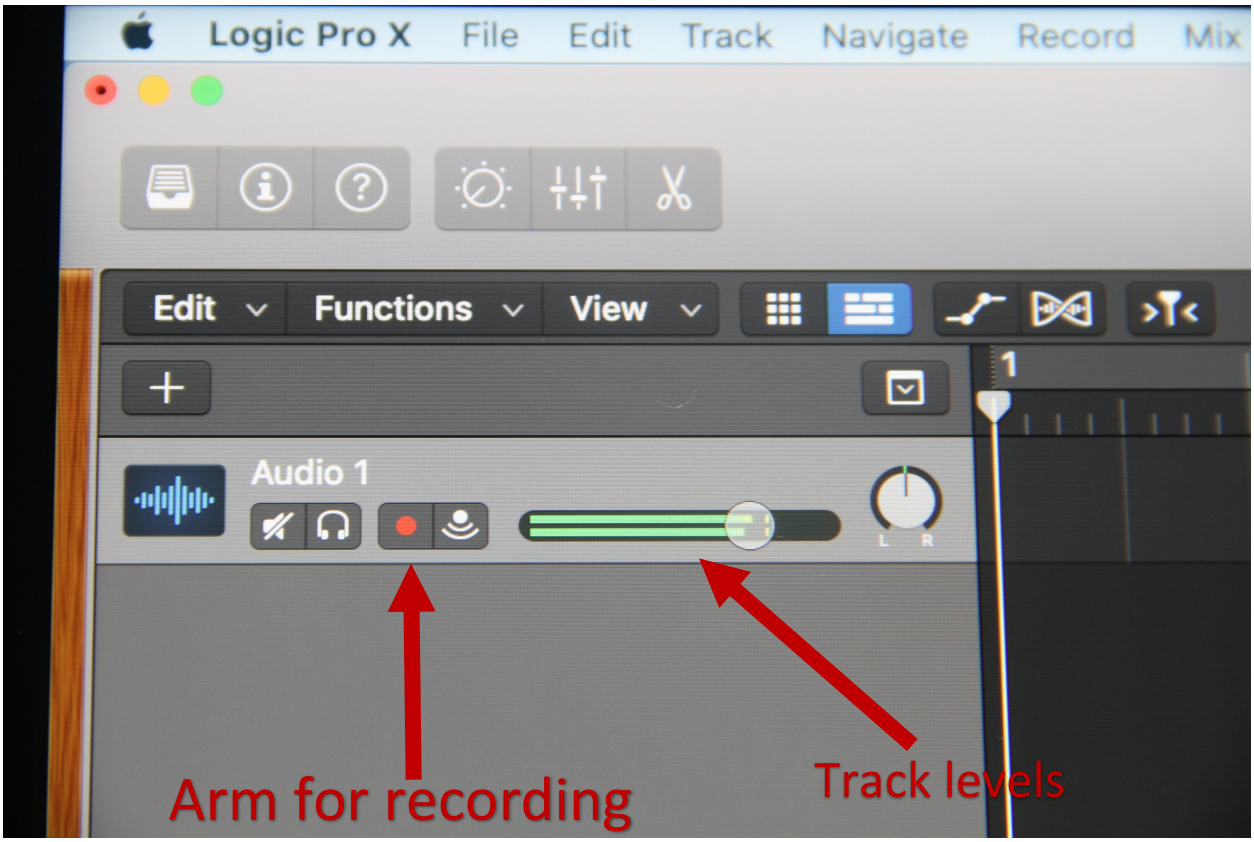
Step 7: Arm your track for recording and check to make sure the sound levels are reading correctly. Adjust as needed. You're ready to begin your session. ☺